

USB2.0 InGaAs NIR CAMERA

ARTCAM-TNIR series

INSTRUCTION BOOKLET

0.33 M pixels ARTCAM-031TNIR series

0.08 M pixels ARTCAM-008TNIR series

Contents

| | |
|---|----|
| 1. Attention | 3 |
| 2. Introduction | 6 |
| 3. Main Features | 6 |
| 4. The Product | 7 |
| 5. Connect the Camera | 7 |
| 6. Specifications | 8 |
| 7. Spectral sensitivity characteristics | 9 |
| 8. External Dimensions..... | 10 |
| 9. Recommended PC | 12 |

1. Attention

■About this manual

1. Before using the camera, please read this manual thoroughly.
2. Please keep this manual reachable and always refer to the contents when needed.
3. Please contact us if the manual is lost or damaged. We will provide a replacement.
4. We cannot guarantee the safety of improper uses of the camera.
5. For your safety, please follow the directions of this manual.
6. All contents are subject to change.
7. Images in this manual may have been simplified to be easier comprehended.
8. Please contact us if you find any unclear points or mistakes in this manual.
9. Quoting, copying or altering some or all parts of the manual without our permission is prohibited.
10. We are not responsible for any lost or damages on your profits due to the use of our products.
11. Please understand that our oversea branches do not provide maintenance or repair services.

■About the Icons

To keep the safety of the user, other people and their properties, please pay attention to the following icons.



Warning

If the user fails to follow the instruction, physical injury on human or damages on hardware may occur.



Caution

If the user fails to follow the instruction, serious injury or death may occur.

■For Safe Use



Warning

●In following circumstances, please stop using the product and turn off the power immediately to prevent the risks of fires and electric shocks. If the product is defective, please contact us for repair or exchange. For your safety, please do not disassemble, modify or repair the camera on your own.

Please stop using the product and turn off the power immediately when :

- The product becomes smoky or gets extremely hot on the surface, or makes unusual smells or sounds.
- Foreign material or water gets into the product.
- The product falls and becomes damaged.

●Do not place the product on unstable surfaces. The product may be fallen and people may get hurt.



Caution

●Do not expose the product to steam or fumes to avoid electric shocks and fires.

●Do not leave the product in high temperature places such as inside of vehicles or under direct sunlight. High temperature may cause damages to the camera, or even cause fires.

●Do not cover the product with cloth or other materials. The product may get extremely hot and the heat may cause deformations on the parts or even cause fires.

●Please avoid dropping or shocking the product as the product may be damaged.

●Do not touch the cable with a wet hand. Such action may cause electric shocks.

●Please avoid continuously contacting the surface of the camera to your skin when the camera is being used. The surface temperature of the camera may cause burns.

■Other Notices

●Please do not use the camera under strong lights such as sun light for a long period. Also please do not expose the camera under strong lights even when the product is not being used because the sensor might be damaged.

Maintenance

● Wipe the dirt on surface with soft cloth or tissue paper. Do not use alcohol, thinner or benzene to avoid damaging the surface paints.

Electro Magnetic Interference

●The camera may interference with electronic devices such as TV and radio. Please do not place the camera next to such equipment.

■Export Control

This product is a List Control item subject to the Foreign Exchange and Foreign Trade Act and its relevant legislations No.1 10 (2) and (4). To export this product from Japan, obtaining export licenses from the Ministry of Economy, Trade and Industry is required. It is also necessary for our company to manage the information of users and the purposes of use. If the end users or purposes of use change after the purchase and thus cause the need to apply export licenses from Ministry of Economy, Trade and Industry, please contact the sales representative in advance.

■Guarantee

To save the environment, we do not issue warranty in printed format. Instead, all records of the warranty periods, delivery dates and the customer information are well kept in our system.

For more details, please refer to the sites below:

Hardware Warranty: http://www.artray.us/download/artray_warranty.pdf

■Dispose

To dispose this product, please return the camera to us. If you decide to dispose the camera without returning it us, please follow related regulations and have the camera disposed as an industrial waste. Please always keep records of the dispose, and make sure the disposed camera cannot be accessed or used by any 3rd party.

■Limited Responsibility

We do not guarantee the functions of this product or the descriptions on this manual to be completely adapted to the users' end applications or marketing purposes. We are also not held responsible for any direct or indirect damages caused by our products under any circumstances.

Please do not use this product on applications that require high reliability. This product is not manufactured to be used as medical, nuclear, aerospace, transportation equipment or equipment that is highly related to human safety. We are not held responsible for any damages on the users' property, equipment or personal safety caused by this product.

2. Introduction

ARTCAM-TNIR series is an Artray NIR camera which employs a 640 x 512 / 320 x 256 InGaAs (Indium gallium arsenide) sensor. The cameras have a high sensitive spectral response from 900 nm to 1700 nm.

ARTCAM-TNIR series adopts USB2.0 interface, so image data can be delivered to PC directly without a capture board. Also, this camera is equipped with an on board memory which avoid data missing during transfer. The option of NTSC video output is available.

3. Main Features

- NIR Detection with High Sensitivity

The InGaAs sensor can detect radiation invisible to human eyes and CCD/CMOS cameras in the wavelength range between 900 nm to 1700 nm band.

- High Resolution, High Frame Rate

ARTCAM-031TNIR uses a higher resolution sensor of 640 x 512 pixel and delivers image at 33.6 frame/second
ARTCAM-008TNIR uses 320 x 256 pixel sensor and delivers high-speed imaging at 90 frame/second.

- USB2.0 Interface

This camera adopts USB2.0 interface, so the data can be delivered to PC directly. No capture board is needed.

- InGaAs Camera Viewer Software

The camera comes with ART-VIEWER the bonded viewer software (Windows XP/Vista/7). With this software, users can easily preview images, save images and change camera settings.

- Software Development Kit (Optional)

For customer who prefers to create their own image processing software or use our camera with other applications, we provide SDK upon requests.

4. The Product


- 1) Camera
- 2) USB Cable Type A-B connector cable, 3m approx.
- 3) AC adapter (DC12V)
- 4) Introduction Booklet
- 5) Viewer software/Device Driver CD

<Options>

- 1) C Mount lens
- 2) Software Development Kit [ARTCCM-SDK]
- 3) 5m extension cable with USB2.0 repeater

5. Connect the Camera

5-1 How to connect a camera

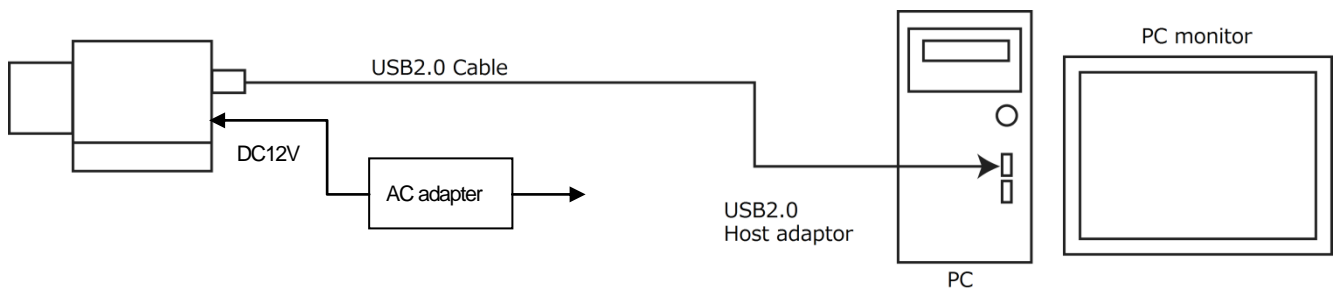

5-2 Shutter Speed

Shutter speed can be changed on the standard viewer software ART-Viewer.

The shutter speed is set directly on the sensor register, so please refer to the following formulas for the real exposure time.

| Model | Method |
|----------------|---|
| ARTCAM-031TNIR | Range : SDK 0~65500 (Exposure Time : 1/18232~3.59sec) ART-Viewer 0~3000 (Exposure Time : 1/18232~164.5msec) $\text{Exposure Time} = (640 + 33) \times \text{Shutter Value} \times 0.0815 \text{ [\mu sec]}$ *1 When setting of SDK is 0, it is possible to obtain images without exposure . *2 640x512, 12.26MHz |
| ARTCAM-008TNIR | Range : 1~32767 (Exposure Time : 1/31545~1.039sec) $\text{Exposure Time} = (320 + 33) \times \text{Shutter Value} \times 0.0815 \text{ [\mu sec]}$ * 230x256, 12.26MHz |

6. Specifications


| | ARTCAM-031TNIR | ARTCAM-008TNIR |
|----------------------------|--|--|
| Sensor Type | InGaAs Image Sensor | |
| Number of effective pixels | 640(H)x512(V) | 320(H)x256(V) |
| Resolution | 640(H)x512(V) | 320(H)x256(V) |
| Active Imager Size | 16.0(H)x12.8(V)mm 1.28" | 9.6(H)x7.68(V)mm |
| Scan Mode | Progressive Scan | |
| Pixel Size | 25(H)x25(V) μ m | 30(H)x30(V) μ m |
| Detected Wavelength | 900~1700nm | |
| Operability | >99% | |
| Shutter Type | Global Shutter | |
| Frame Rate | 33.6fps | 90fps |
| Shutter Speed | 1/18232~3.59 sec | 1/32767 ~ 1.039 sec |
| Detectivity | $\geq 5 \times 10^{12}$ Jones | |
| Gain | High Gain : 31 μ V/e- Low Gain : 1.2 μ V/e- | High Gain : 13.3 μ V/e- Low Gain : 0.7 μ V/e- |
| Full Well Capacity | High Gain : 93Ke- Low Gain : 2.5Me- | High Gain : 170Ke- Low Gain : 3.5Me- |
| A/D Resolution | 12bit | 14bit |
| Interface | USB2.0 Bulk Transfer | |
| Synchronization System | Internal Synchronization | |
| Lens Mount | C Mount | |
| Power | DC12V | |
| Power Consumption | Under Approx.20W | |
| Ambient Conditions | Operating Temperature/Humidity : 0~35°C/10~80%(Non condensing) Storage Temperature/Humidity : 0~60°C/10~95%(Non condensing) | |
| External Dimensions | 71.5(W)x61.5(H)x125(D)mm *Lens, tripod and cables not included | 71.5(W)x61.5(H)x61.4(D)mm *Lens, tripod and cables not included |
| Weight | Approx. 400g *Lens, tripod and cables not included | Approx. 300g *Lens, tripod and cables not included |

*Depending on lens you use, our product might not reach the best condition and problems, such as the low resolution and lightness, might occur.


Please consult our sales representative for the recommended lenses.

7. Spectral sensitivity characteristics

7-1 ARTCAM-031TNIR

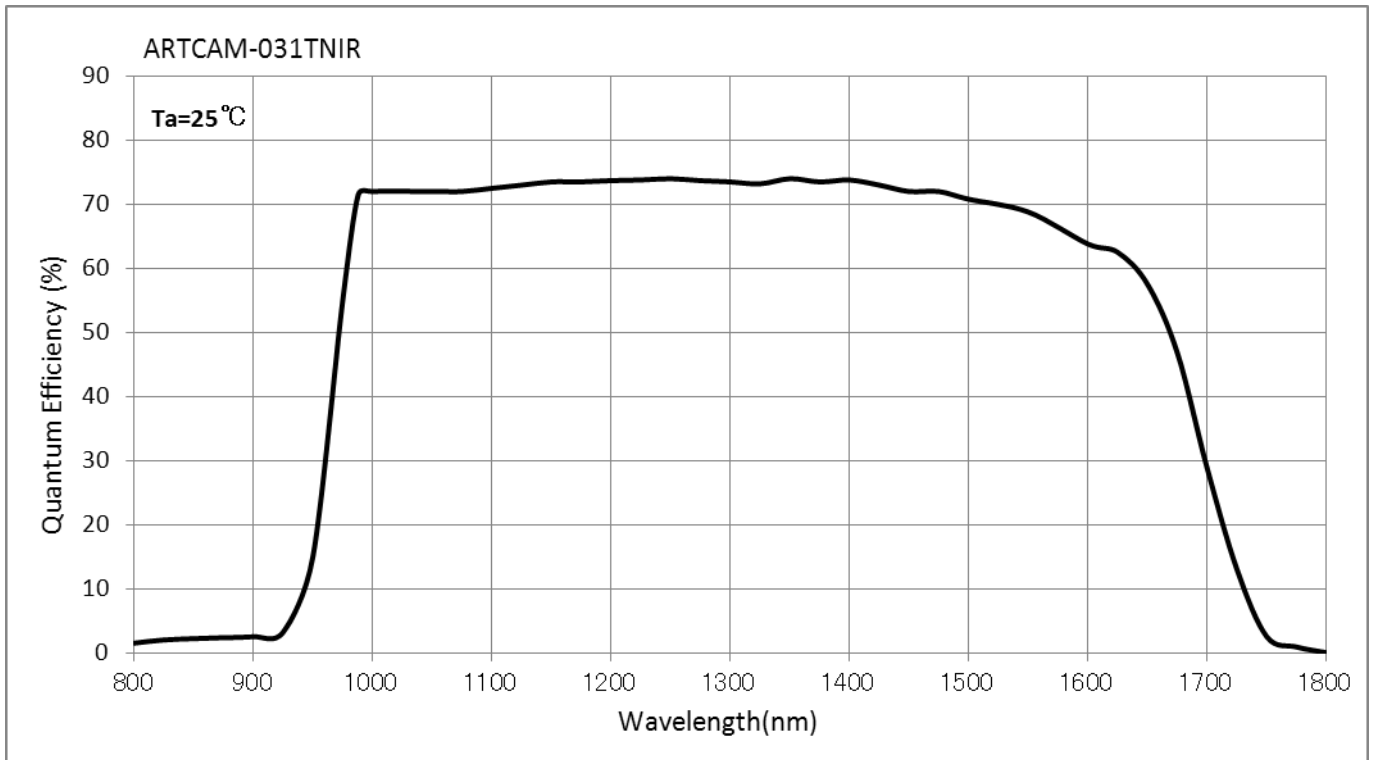


7-2 ARTCAM-008TNIR

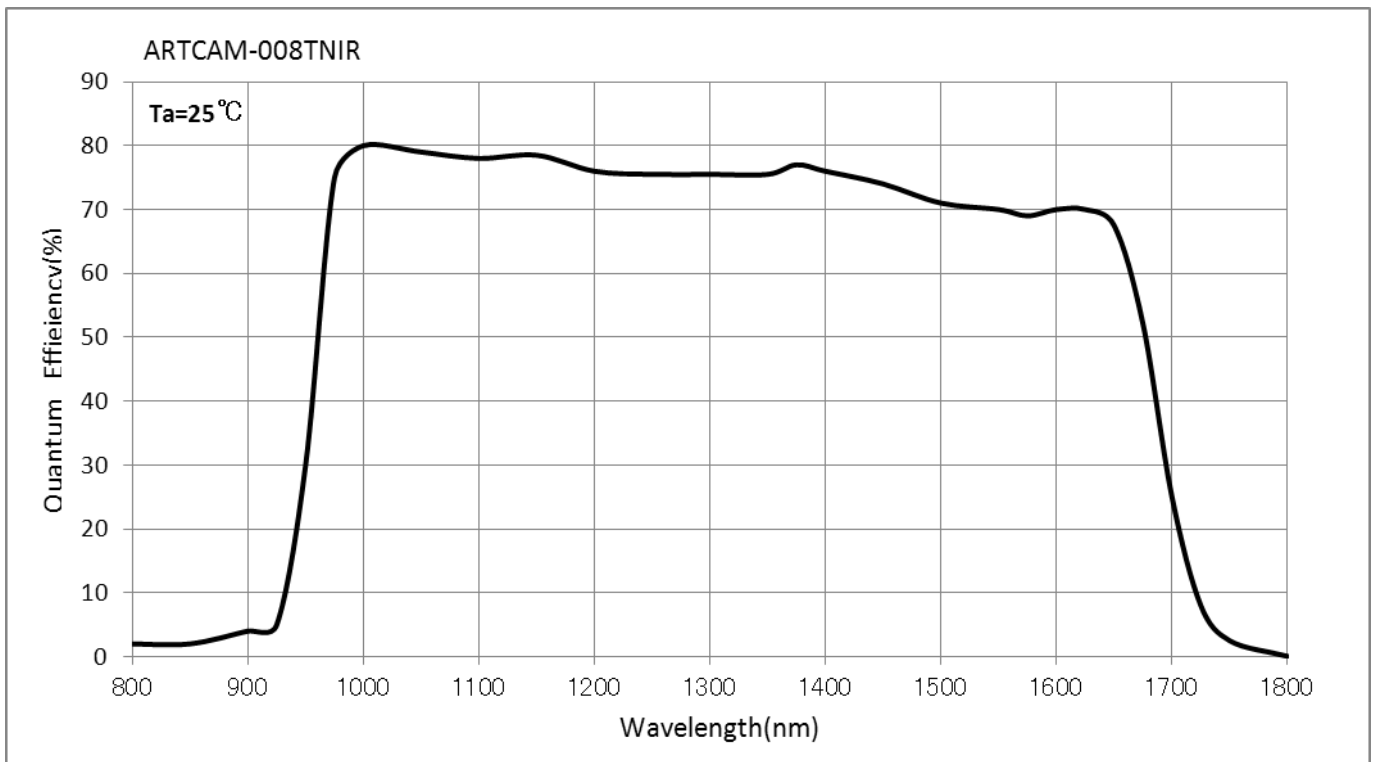


8. External Dimensions

8-1 ARTCAM-031TNIR

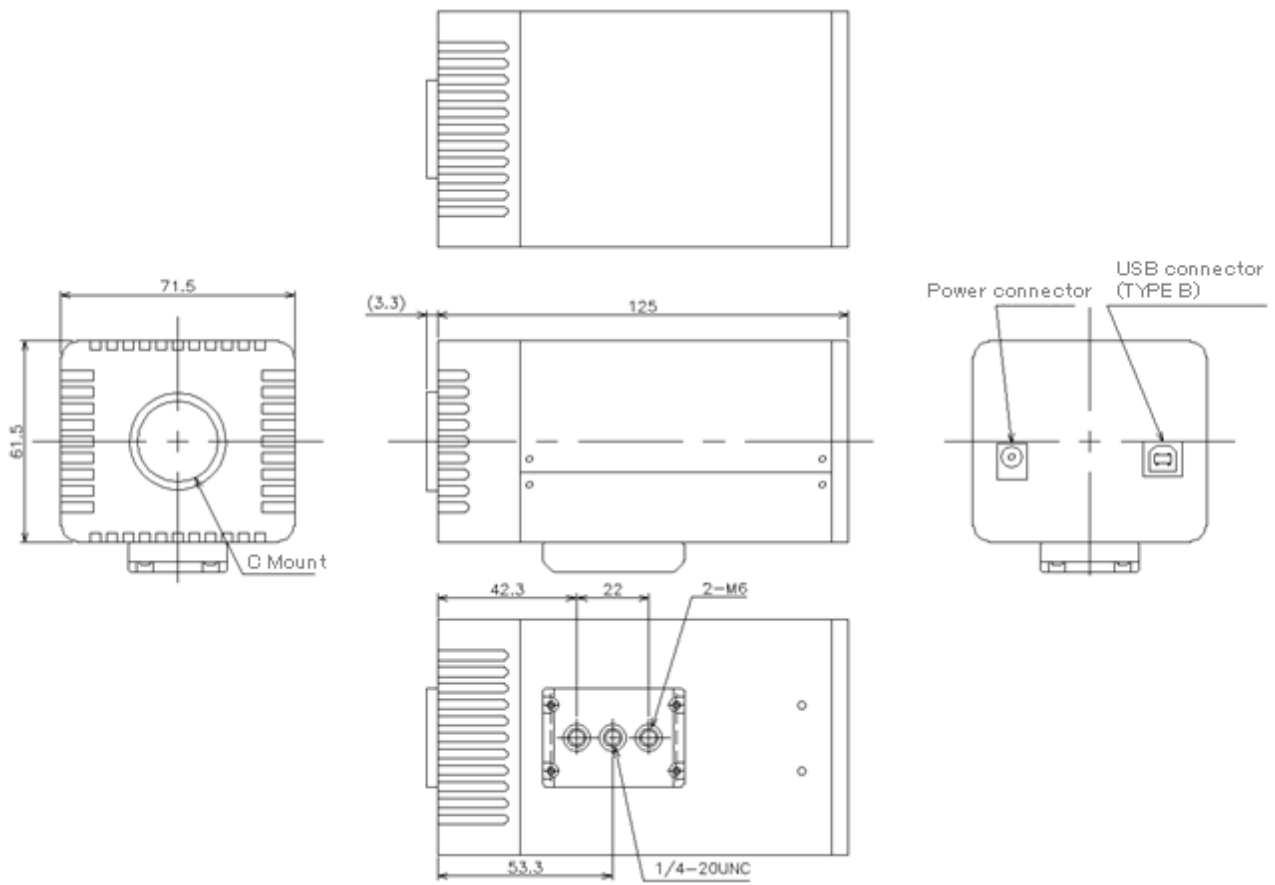

8-2 ARTCAM-008TNIR

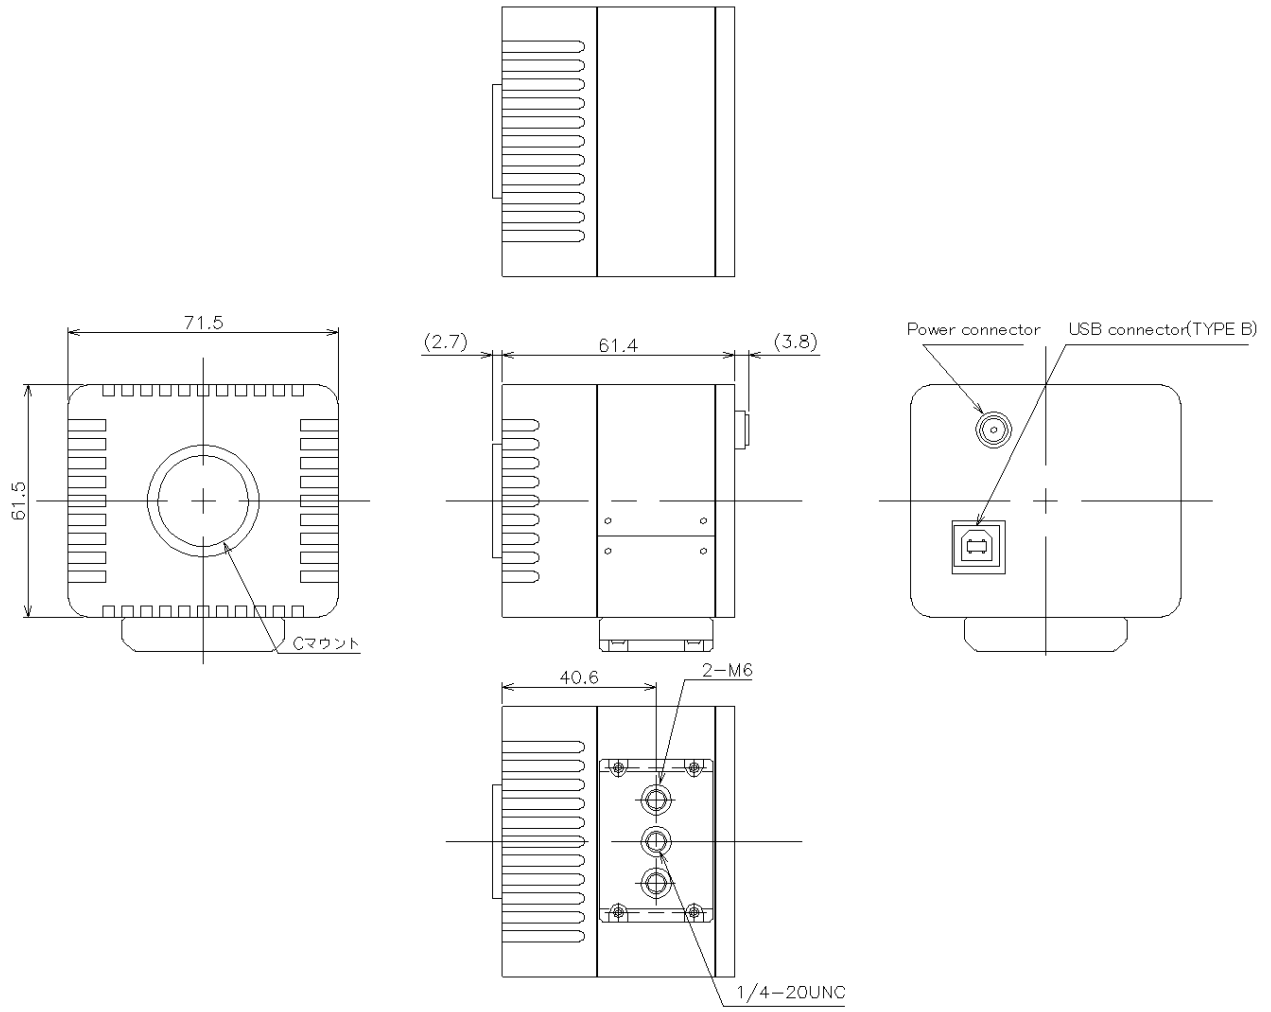

9. Optional Functions

9-1 Recommended System Requirements

- Intel chip set, Southbridge above ICH6
- CPU: Intel Core2duo 2.4GHz or higher
- Memory: Above 512MB
- OS: Windows XP or above

9-2 Minimum System Requirements

- USB2.0 Enhanced Host Controller
- CPU: Intel Pentium4 1.7GHz or higher
- Memory: Above 256MB
- OS: Windows XP or above



Caution

■Please refer the restrictions below when you use ARTCAM.

(1) Recommended System Requirements

If the system specifications do not meet the requirements recommended above, it may be difficult to run at the maximum frame rate.

(2) Connection of Multiple USB Devices

Please be aware that depending on the specifications of the user's PC, it may be difficult to supply the power to the USB devices when multiple USB devices are connected.

(3) USB2.0 cable Extension

We cannot guarantee the functionality of the USB2 camera if the user adopts USB3.0 extension cables or repeaters which are not confirmed by us. With the extension cables or repeaters, the bandwidth of transfer may differ, and thus caused malfunctions such as a low frame rate or recognition failure on the camera.

What may cause the problem is that the regulation of the power lines becomes not enough, and so causes impedance mismatch on data signals.

*For the recommended extension cable, please contact our sales department. (TEL: +81-3-3389-5488)



TUV 100 01 0310

ARTRAY CO., LTD.

1-17-5 Kouenjikota, Suginami-ku, Tokyo 166-0002 Japan

Tel: +81-3-3389-5488 Fax: +81-3-3389-5486

Email: sales@artray.us URL: www.artray.us